


# IMPACT SERIES Cordless Screwdriver OPERATION AND MAINTENANCE MANUAL

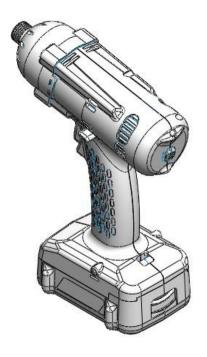

SKC-PTI-160B (Impact Driver)

SKC-PTI-250W (Impact Wrench)

## DIXON AUTOMATIC TOOL, INC.

2300 - 23<sup>RD</sup> Avenue - Rockford, IL 61104 Phone: 815-226-3000 / Fax: 815-226-0180 Email: custsery@dixonautomatic.com

www.dixonlighttools.com



Please read manual carefully before operating the rechargeable impact screwdriver.

## Icon Instruction









Read manual

Warning

Recycle

Indoor use only







No disassemble







Accessories

Item	Quantity	Unit
Manual	1	PCS
Guarantee Card	1	PCS
Waist hook	1	PCS
Screw M3*0.5P*10LT	1	PCS
Socket Extension (B) / (W)	1/0	PCS
BIT(B) / (W)	2/0	PCS



# Warning A

Read all instructions and make sure the appearance of the device has no damage before you use it. Failure to follow all instructions listed below may result in electric shock fire and/or serious injury.

- 1. Keep the working area nice and clean.
  - 1.1 Mess and dark areas may cause of accidents.
  - 1.2 Keep the device away from rain or moisture to decrease the risk of electric shock or short-circuiting occurred.
- 2. Be alert to workplace safety
  - 2.1 Use the device under a well lit and clean environment.
  - 2.2 Keep children and other people away unless the person has been assigned for the task to avoid the danger of injury.
  - 2.3 Do not play around while the tool is being used to avoid the danger of distractions.
  - 2.4 Do not work with the device in potentially explosive environments in which there are inflammable liquids, gases or dusts. Electrical power tools create sparks, which can ignite dusts or fumes
  - 2.5 Do not use the device if you are tired or under the influence of drugs, alcohol or medication.
- 3. When the devices are not being used, store them in a safe place.
- 4. Use a suitable device for the job will be safer at work and have a better result.
- 5. Always use a screwdriver that is intended for the task you are undertaking. Do not overload or use it improperly such as drilling or tapping.
- 6. Dress properly. Do not wear loose clothing or jewels while operating the tool to avoid the danger of trapping.
- 7. By using the device correctly, make sure to hold it firmly with two hands in place before starting the trigger.
- 8. When using the electrical power tool, take into account the auxiliary handle or waist hook is advantage of working conditions. On the contrary, the purposes of the waist hook or driver hook is convenient to put the device away and easier to keep it out of reach of children.
- Look after either the device or the battery carefully and have any damaged parts repaired by an authorized or qualified shop. Always keep the tool nice and clean; pay attention on the machine grease which might ruin the tool.
- 10. Disconnect the plug from the power source after the charger has been used.
- 11. Take apart the battery from the device when it is not being used.
- 12. Use only the accessories that are detailed in the operating instructions. The use of others which are not recommended in the operating instructions may affect the functioning of the device. It could lead to an increased risk of personal injury as well.
- 13. Remain alert at all times and watch what you are doing during proceeding. Before operation, always check every part is in good condition and move freely in order to function properly.
- 14. This device only applies for metal screw bits designated with their dimensions and their shape. Do not recommend to countersink or force of loading on any material such as plastic and wooden.



- 15. The device does not apply for elastic or tensile load with washeron.
- 16. To prevent parts in gearbox from damage, replace the grease at least once for every year.
- 17. It is necessary for the operators to read and follow up all the operating instructions in this manual. KILEWS is not responsible for any personal injury that might cause of disobeying the safety advices

## **Function of Cordless Protection**

Over electric current protection

Thermal Protector

Slow rotation protection

Battery Identification

Prevent from low power

Stall protection

Reverse control protection

Sleeping mode


# Warning A

# Do not attempt to repair or disassemble this cordless screwdriver, the warranty will be considered void.

- 1. Make sure to remove the battery pack before maintaining or repairing the device by a qualified technician.
- 2. Do not attempt to disassemble or reassemble the device at will which may result in poor performance or danger of injury, the warranty applies only to initial package.
- 3. Do not repair the device with other than genuine KILEWS replacement parts may result in poor performance or danger of injury, the warranty will be considered void.
- 4. The temperature between  $0^{\circ}$  C  $\sim$ 35° C would be an ideal condition of carrying out the tasks on the device.


## **Operation Cautions**


1. Charge the battery in the charging station before first use to make sure operates at its highest capacity. To ensure operators against injuries, release the forward/reverse lever as arrow showing below into a center position to have trigger locked before start or disassemble the device.

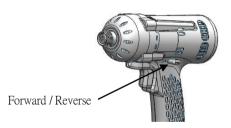




- Below illustration is showing the process of correct install & disassemble the rechargeable battery. 2.1. The beep sound comes along with a flash while the screwdriver is supplied genuine battery installation. It could be operated once the battery has been identified.
- 2.2. Too slow to install the battery may cause error identification so the beep sound and flash would be continuing. In order to function properly, re-assembling it as below process again.

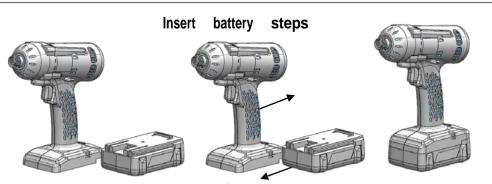

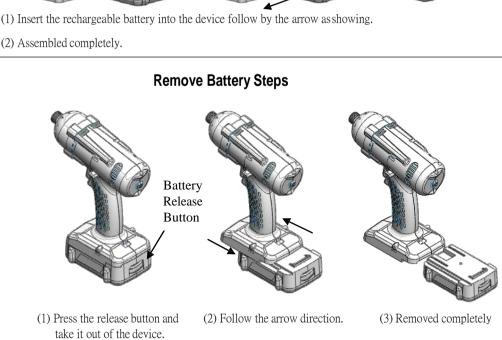



# **Appearance Functions Introduction**

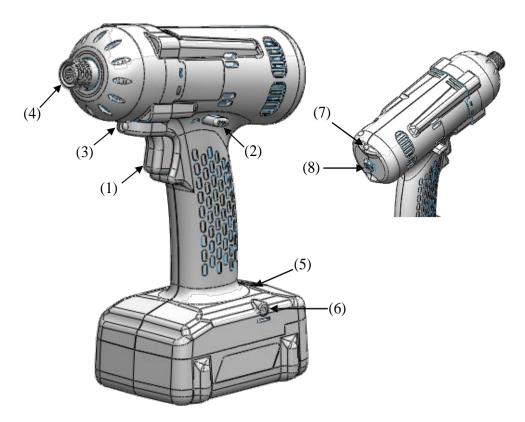

## **Function Name Table**

No.	Description	No.	Description
(1)	Trigger Switch	(5)	Wrist strap hole
(2)	Forward/Reverse Lever	(6)	S waist hook
(3)	LED Light	(7)	Indicator light
(4)	Bit sleeve	(8)	H/M/L time control switch



### Manual / Functions

#### 1. Impact cordless screwdriver

Screws are continually fastened up while come along with clutch PA-PA-PA sound until the device reaches the setting time of H/M/L control.

#### (1) Trigger switch

The LED lights on when the trigger switch has been pressed about one-third down, and then the screwdriver starts functioning when the switch trigger has been pressed half way down; on the contrary, it stops when the screw has been tightened up or the trigger has been released.

#### (2) Forward/Reverse switch

When push the Forward/Backward switch to the right. According to the symbol on the switch, the screwdriver rotates clockwise and tightens the screws. When pushing the switch to the screwdriver will rotate anti clockwise and loosen the screw. When the screwdriver is idle, set the Forward/Reverse switch in the middle.



Forward (screw)




Reverse (unscrew)

#### (3) LED light

While press the trigger, the LED lights up automatically to assist the job to be done; on the contrary, it will be off once the trigger has been released.

#### (4) Bit sleeve

Switch the screw bit and compatibility, pull the head of the type B screwdriver, and install the bit according to the diagram below, after installing the bit please also install the W type cap and push it in following the arrow indicated on the diagram below on Diagram 2.

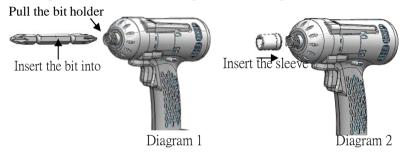



(5) Hole for wrist band

Enable to install the wrist band which is more convenient and safer for users.

(6) ) Waist hook

The waist hook allows users to carry the device easily by attaching it to their work belt.

(7) Functional light and the status indicator

Whenever the remaining power in the rechargeable battery is fewer than 20%, the tool is still alive but with red flash lights on. Once the remaining power is towards 10% or even fewer it may result in poor performance with the continuing red lights on.

(8) ) H/M/L time control switch

Time control switch H/M/L is to control the running time of the screwdriver after screws are fastened up. When set the H/M/L switch to Hi, the device will complete the impacting and fastening process under 5 seconds. When set the H/M/L switch to Mid, the device will complete the impacting and fastening process under 3 seconds. When set the H/M/L switch to Lo, the screwdriver will complete the impacting and fastening processunder 1 seconds.


- 2. Chemicals, Acetone, Benzene, Alcohol, Thinner, Ketone, trichloroethylene, etc shall not be in contact with the surface of the screwdriver in order to prevent chemical damage.
- 3. Please pay attention when operating the rechargeable screwdriver. Do not drop or abuse the screwdriver
- 4. Not allow to turn the H/M/L switch during operation in order to cause system malt-function.
- 5. During operation, the Forward/Reverse switch has been changed accidentally that the device will enable its self-protecting mode which is power off. Re-start the tool when this happen.
- When switches Forward/Backward switch during the screwdriver still operating, the protection mechanism will be triggered and cause the motor to stop. Restart the screwdriver again will change back to normal.
- 7. Each operational torque setting, using time and frequency may result in different level of wear and tear, at higher torque setting and use extensively could accelerate the wearing down of tool. After one month, the torque is getting reduce gradually at the rate of 2~3% or 3~5 %( max torque). The longer use of the device, torque reduction will become stable and the users could measure the torque by a tester on a regular time schedule to check if the torque power still meets the criteria.

## **Other Cautions**

- 1. The best condition of using the tool is under 8 hours a day, do not over loaded.
- Do not attempt to repair or disassemble this cordless screwdriver without authorization. Always
  have the device serviced by assigned factory or qualified person in order to have the warranty
  effective continually.



- KILEWS is not responsible for any poor performance or damage caused by customers own modification of the tool.
- 4. It is necessary for the management to have individual operators read and follow up all instructions in this manual. Do not attempt to repair or disassemble this cordless screwdriver themselves.
- 5. Removing protection cap by pry open the slots located on both side of the screwdriver as indicated in the diagram 1 below. To install the protection cap, the cap gap facing downward and push it into the slots. As indicated in the diagram 2 below.

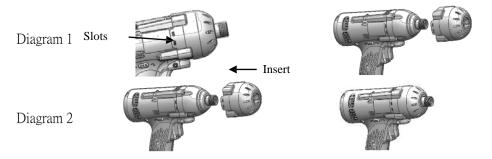

 The torque measuring of SKC-PTI-250 and SKC-PTI-160 is completed by SKIDMORE-WILHELM model J bolt tension calibrator.

# **Description of battery and charger**



- 1. KILEWS SKC-LB series of batteries as options to fit in the device; you may consult with local agent based on your task requirement.
- 2. The use of other than genuine KILEWS batteries or screwdrivers can't be active due to the build-in protection system enforce no charging.
- 3. SKC-P120W charger with LED on is recommended.

# Warring beep sound

- Screwdriver stops along with three warring beep occurs while the motor speed is lower than 1000 rpm.
- 2. PCB temperature detector preventing the screwdriver overheated; it stops along with three warring beep occurs while the PCB temperature is over 70°C.
- Restarting the screwdriver which dismissing from a safety mood may come along with three beep sounds.




# **Specifications**

MODEL		SKC-PTI-250W	SKC-PTI-160B		
Input Voltage		DC 18V			
	Н	0~250	0~160		
Bit torque(Nm)	M	0~160	0~120		
	L	0~100	0~80		
Rev speed at no load n0: (r/min) )±10%		0~2300	0~2100		
Impact rate (B.P.M)		0~3800	0~2800		
Weight (Kg)		1.1kg( battery not include)			
Length (mm)		188 mm * 181mm (L*H battery not include )			
Model of rechargeable battery		SKC-LB1830/SKC-LB1840			
Model of battery charger		SKC-P120W SKC-P80W SKC-80W			
Bit type		W 1/2'sq	B		

Bits Code ~ W: square B: Hex 6.35mm

Accessory ~ B I T no. : NO.3# apply to 3.0~4.0mm

# CAUTION A KEEP THESE INSTRUCTIONS DO NOT DESTROY

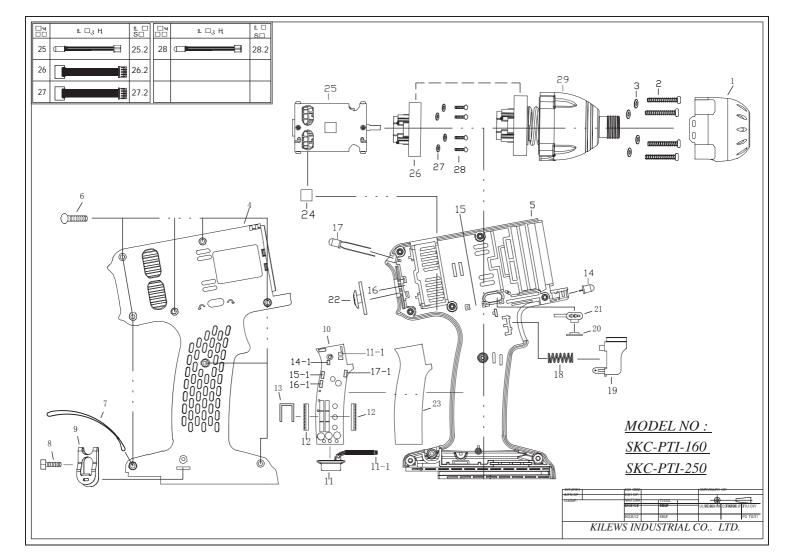

### őŕŊĮIJķıŃ őŕŊĮIJķıŃĺįĶ őŕŊĮijĶıŘ

ŏŐ	őłœŕŔ ŏŐ	őłœŕŔ ŏłŎņĮņ	őłœŕŔ ŏłŎņĮń	ŒĬŵ	ŏŐ	őłœŕŔ ŏŐ	őłœŕŔ ŏłŎņĮņ	őłœŕŔ ŏłŎņĮń	ŒĪŵ
IJ	ńĶıijijĴ	őųŰŵŦŤŵŪŰů	Ģ嬟□	IJ	IJк	'nĴĴIJIJIJ	œŦť ōṇŅ	ōṇŅ 袱□Ķ忱橼 鵙□	IJ
ij	ń'nijıĶIJĺĮĴ	ŔŤųŦŸ	坢航	ĵ	IJĹ	ńŌijĹıĴĴ	ŕųŪŨŨŦų ŔűųŪůŨ	□嫉□	IJ
ĵ	ń'nijıĴıijĮĵ	ŘłŔ'nņœ	厗□	ĵ	IJĺ	ńńкііIJĵŇ	ŕųŪŨŨŦų łŴŴŦŮţŭź	ト□ 攳斄□□ ⑩	IJ
ĵ	ńłŃuuĵ	'nŰŶŴŪůŰĮŖűŴŪťŦ	DI味	Ŋ	ijı	ùkĴijĴIJĮIJ	ŇŰųŸŢųtİœŦŷŦųŴŦ ŔűųŪůŨ	<b>喉</b> ω↓□ 嶦□箕	IJ
Ķ	ńŃŃuuĵ	'nŰŶŴŪůŨĮŖůťŦųŴŪťŦ	味	IJ	ijIJ	ńŊĶıijIJĹĮij	ŇŰųŸŢųtİœŦŷŦųŴŦ ōŦŷŦų őŕŊĮIJķı	睺ω≒□ 👜□ ⑩ 啵刚□ốŕŊĮIJķı	IJ
ķ	ń'nijιĶijκ	ŔŤųŦŸ	坢蓟	Ĺ		ńŊĶıijIJĹĮIJ	ŇŰųŸŢųtİœŦŷŦųŴŦ ōŦŷŦų őŕŊĮijĶı	睺ωネ□ 中間 ⑩ ፻湹刚□ðŕŊĮijĶı	IJ
К	œĵĹIJĹĸĵ	ŘųŪŴŵ ţŢůť	ト僽□	IJ	ijij	ńŊĶıijIJķĮIJ	'nŊĮōŐ ŔŸŪŵŤű	檀Ý仂ધ□ ₹□	IJ
Ĺ	ń'nijıĶijĶ	ŔŤųŦŸ	坢航	IJ	ijĴ	ŘIJıijıı	ŊůŴŶŭŢŵŨůŨ ŘŢŴűŦų	őń鸛齀□耷 ĴiīIJiijīiįij	IJ
ĺ	ńŋijιιIJĵ	ŘŢŪŴŵ ũŰŰŬ	Ŕ儘□□戌	IJ	ijĵ	ŘIJıijııĮIJ	ŊůŴŶŭŢŵŨůŨ ŘŢŴũŦų	őń鸛齀□耷 ĴιīĴı	IJ
IJı	ņňĴIJĶIJĸ	őńŃ ġőŕŊĮIJķıŃġ	沉‡搴噘 ģőŕŊĮIJķıŃġ	IJ	ijĶ	ŎŐııııĵ	ŎŰŵŰų łŴŴŦŮţŭź	楔炕□⑩	IJ
	'nŅĴIJĶIJĸĮIJ	őńŃ ġőŕŊĮijĶıŘġ	沉⁻ŧ <b>挲</b> 嫐 ģőŕŊĮijĶıŘģ	IJ	ijķ	ňĴıIJıĴ	ŎŰŵŰų ŔűŢŤŦų	楔忼噘	IJ
IJIJ	ņňĴIJĶıĵĮĴ	őŰŸŦų ŎŰťŶŭŦ	暣垢汽鵜□□⑩	IJ	ijк	ń'nijıĴıIJĮIJı	ŘłŔ'nņœ	厗□	ĵ
	ņĴijijĶ	'nņłŕŔŊŏŌ	<b></b> 剧程耸	ij	ijĹ	ń'nijıĶıĶĮĹ	ŔŤųŦŸ	坢魧	ĵ
IJĴ	ĶĶıNıĮĮĴ	ńōłŎő	<b>劃</b> 程貸□骬	Ŋ	ijĺ	ňśőŕŊIJķıııĮIJŃ	ňŦŢų'nŰŶŴŪůŰŧŰųőŕŊĮIJķıŃ	滺廒醬□⑩ ŔŌńĮőŕŊĮIJķıŃ	IJ
IJĵ	ϙIJĶιIJĸĮIJ	ōṇŅ ōŪŨũŵ	ōṇŅ茯哩稠口口⑩	Ŋ		ňśőŕŊIJķıııĮijŃ	ňŦŢų 'nŰŶŴŪůŨ ŧŰų őŕŊĮIJķıŃĺįĶ	滺廒醬□ ⑩ ŔŌńĮőŕŊĮIJķıŃĺįĶ	IJ
ŊĶ	ņňĴIJĵĴĺĮIJ	ŇÍœ ŔŸŪŵŤũŪůŨ ņŭŦŮŦůŵ ốńŃ	睺ω廱拏∭□□⑩	Ŋ		ňśőŕŊijĶıııĮIJŘ	ňŦŢų 'nŰŶŴŪůŨ ŧŰų őŕŊĮijĶıŘ	滺廒醬□ ⑩ ŔŌńĮőŕŊĮijĶıŘ	IJ
IJķ	ņňĴIJĵĵıĮIJ	ŔűŦŦť ŢťũŶŴŵŮŦůŵ őńŃ	檀Ý忇拏橛□□ ⑩	Ŋ					